

We appreciated your feedback


Please feel free to scan the code below and leave us a Google Review



Google
Reviews ★★★★★



HOME HANDRAILS

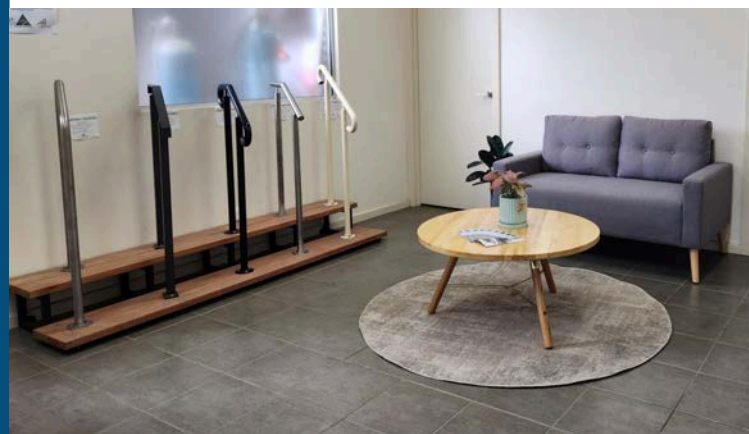

Showroom open
by appointment only.
7/9 Mirra Court
Bundoora 3083
VIC

Phone: 03 9465 0622

Email: sales@homehandrails.com.au

HANDRAIL INSTALLATION GUIDE



HOME HANDRAILS

Important: It is essential that the posts be fixed into a suitable surface area using appropriate fasteners to suit the conditions and loads that the handrail will endure.

Home Handrails will not accept responsibility for any damages caused by failure of fixing or fixing surface.

Home Handrails recommends that installation is performed by an experienced trades handy/trades person.

Before drilling into any surface, ensure that there are no services such as plumbing or electrical in the installation area.



Installation Steps

Step 1

Remove items from packaging.

For freestanding handrails, connect posts to the handrail tags by tightening up the screws so the posts can still move but not too freely. Place the handrail in desired position ensuring the posts are level, then mark holes.

For Wall mounted handrails, connect post to handrail tag and wall plate to handrail end tag. Ensure bottom post is level, and wall mount plate is at desired height, mark holes accordingly.

Step 2

Drill holes carefully to suit the appropriate fasteners. Ensure that the surface is appropriate for the type of fastener used and that you are not too close to the edge of the surface you are drilling into.

Step 3

Position handrail in place and insert fasteners making sure they are all tight.
Tighten handrail screws.

**For Technical Information Please Call
Home Handrails (03) 9465 0622
or
visit www.homehandrails.com.au**

Recommended Fasteners

Posts

Masonry Fixing

Solid concrete: M8 x 100 Trubolts

Brick or potentially hollow masonry:
Chemset 101 (or equivalent) injection & M8 threaded stud

Timber Fixing

M8 Coach Screws, suitable length for substrate

Concrete-in Post

Approx. 450mm deep x 300mm diameter hole.
Use Concrete mix.

Wall Bracket

All Home Handrail wall mounted brackets are countersunk to suit a 14g batten screw.

Masonry Fixing

14g batten screw plus an 8mm Ramset plug.

Timber Fixing

14g batten screw

Please note: All substrates where handrails are to be mounted require thorough inspection prior to installation. If substrate is deemed unsuitable, further measures i.e. concrete footing/timber blockwork will need to be installed prior to handrail installation.